

# MC-28 KEY CHAIN PERSONAL ALARM

## ENVIRO SERIES

Energy efficient design uses just two button cell batteries, without giving up the 120 Decibel alarm volume. Mercury free, Cadmium free - green cells minimize the impact to the environment.

### Personal Protection




Best used by people at risk entering or leaving their automobiles or homes, when they are most likely to have keys in hand. Can also be at work or school, with optional lanyard, for hands-free availability.

Attach keys with built in key ring. If attacked, pull the pin out using the key chain. Alarm sound continues as long as the pin is removed.

### Test/Warn Button

Built-in test button activates the alarm when pressed to easily check alarm function. Can also be used as a call button by seniors or disabled persons confined to bed.

Warning function can be used as a distraction, but this is not recommended, as alarm will stop if knocked from the hand or taken away.

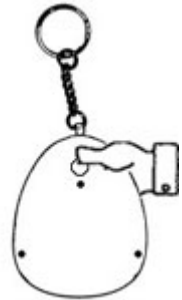

### Changing Batteries



Remove three screws from back cover and replace the two L1154H Mercury free-green cells. Replace cover and tighten screws.

Battery is equivalent to: LR44, AG13, A76, GPA76, V13GA, G13A, RW82, 208-904, SB-F9, CA18, CA19.

## Street Defender Personal Alarms