

**Personal Alarm
With U.V. light
2 in 1**

- 323
- 333
- 368U
- 378




ALARM SUITABLE FOR:

- Joggers
- Elderly
- Disabled
- Night Shift Workers
- People who Live Alone
- Students

INSTRUCTIONS

TO CHANGE BATTERY:

When the alarm sound goes low, Please remove screws from back cover and replace 4xLR44 size new batteries

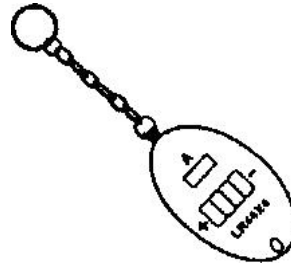


WARNING:

The alarm is very loud. Never put the unit close to your ears.

PANIC ALARM MODE:

Pull off the hand strap to activate the alarm. (To turn off the alarm. Insert the hand strap to the plug.)

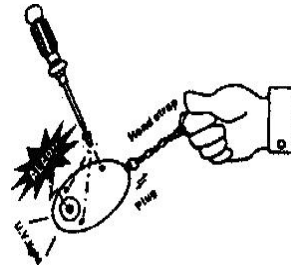

U.V. LIGHT MODE:

Press the button to examine the authenticity of various banknotes, bank draft, credit card, famous brand wines and cigarettes.