


MC-684 TOUCH SENSOR ALARM

ELECTRONIC DOOR ALARM

Doorknob Safety Sensor Alarm will sound if someone even touches the door handle. Recommended for students and travellers to protect hotel rooms, dorm rooms and balcony doors.

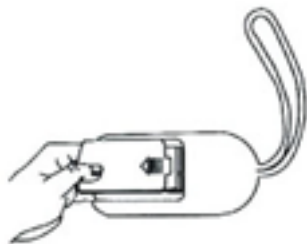

Changing Batteries

Remove the battery cover on the rear of the unit by sliding the cover downwards. With the unit being in the "OFF" position insert a 9V battery (not included) following the polarity diagram shown in the battery compartment.

NOTE: Incorrect insertion of the battery will result in the alarm being damaged.

Personal Protection

Hang the unit on the inside of the door handle and secure with the cable tie enclosed.

Slide the side switch to the "ON" position.

If an intruder touches the external door handle the alarm will emit a loud siren alerting you that someone has tried to gain entry into your property.



As soon as the door handle is released the siren will stop. However the alarm will re-arm itself and activate if the door handle is touched again.

NOTE: This product is not suitable for metal doors.

Electronic touch detection will sound the alarm if someone even touches your doorknob.

Street Defender Personal Alarms

www.streetdefender.com

info@streetdefender.com